


FOOD PROCESSOR

FP050

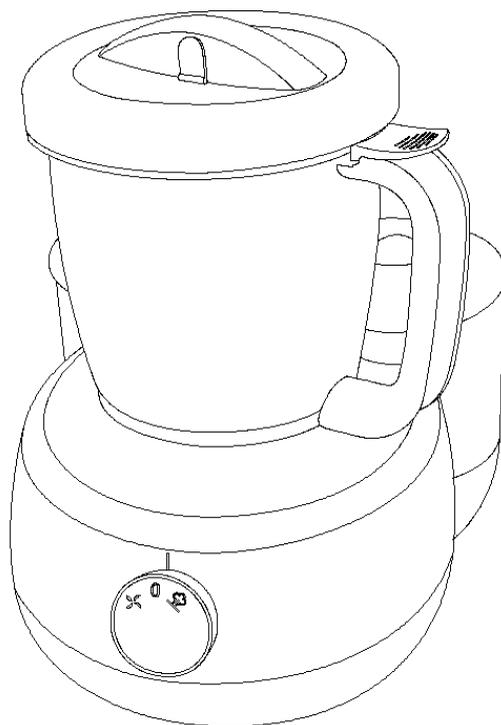

Instructions for Use

Please read before use these instructions and keep them for future reference.

SAFETY WARNINGS

ATTENTION!


- This unit is designed as a “food processor for domestic use”; any other use is to be considered inappropriate and therefore dangerous.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Cleaning and user maintenance shall not be made by children without supervision.


- Children shall not play with the appliance
- If the supply cord (H) is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Only place the appliance on hard, flat and stable surfaces which are not accessible to children.
- Care should be taken when using the appliance due to the emission of hot water vapour
- When the appliance is running, do not remove the Steam chamber cover and always pay very careful.
- Unplug the appliance during filling and cleaning.
-   Warning: do not obstruct the steam outlet hole with cloths, objects or your hands as the temperature of the steam could cause burns or severe scalding.
- Do not make the appliance work without all the blade group
- Always handle the blade unit very carefully: the blades are very sharp. Always unplug the equipment from the mains socket before touching the blades.
- To prevent the blades from becoming oxidized, always clean and dry the blade unit thoroughly after use.
- Always unplug the equipment from the mains socket before touching the Heating Element.

- After having removed the appliance from its packaging, ensure that it is intact and that there is no visible damage. When in doubt, do not use the appliance and only contact technically competent personnel or retailers.
- Never switch the appliance on without having filled the tank with the required quantity of water
- If the blades get blocked always unplug the appliance before removing the ingredients causing the blockage
- The appliance gets very hot during steam cooking and may cause burning in the event of contact.
- Always use the handle to lift the bowl
- Switch off and leave the appliance cool down for 15minutes between 2 uses
- Don't fill the tank with more than 250ml of water for use.
- Don't exceed 30 seconds for a continuous blending.
- Never put/add liquids other than water in the tank.


Fig.1

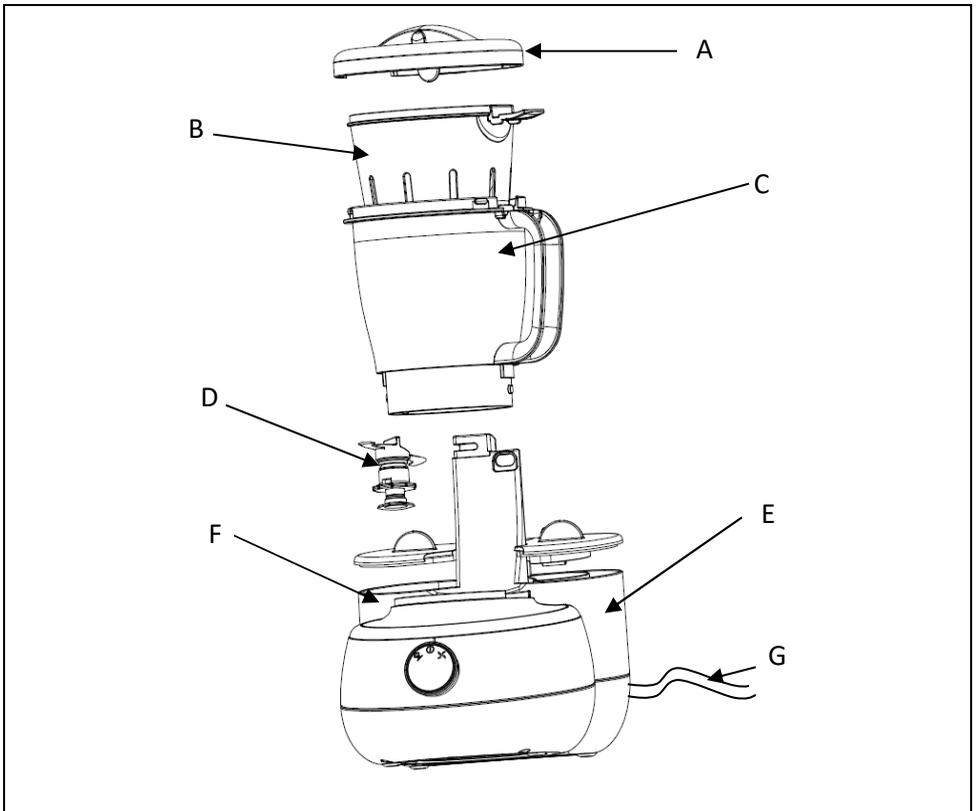


Pic.2

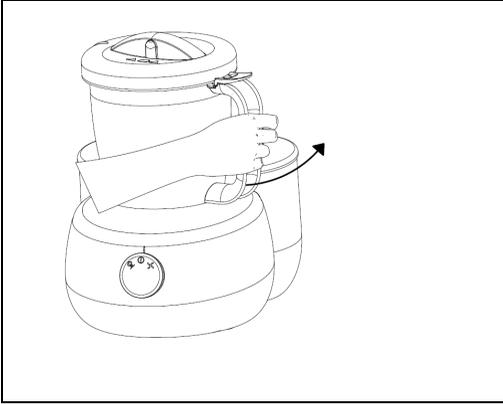


Pic.3

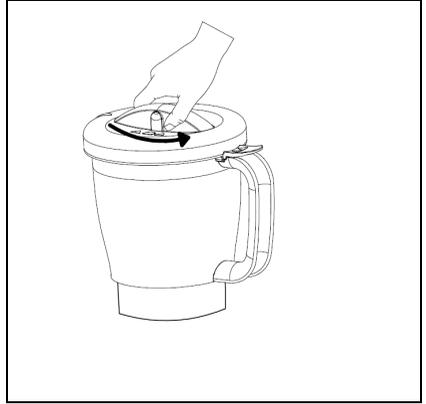


Pic.4

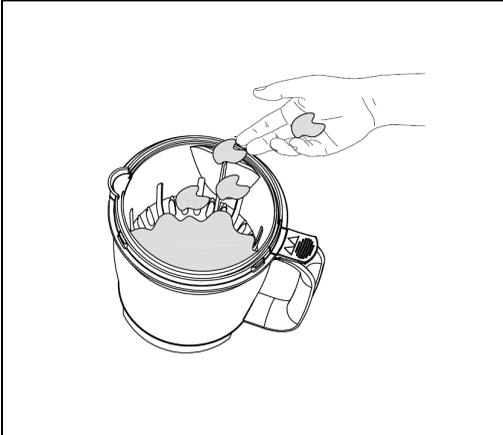


Pic.5

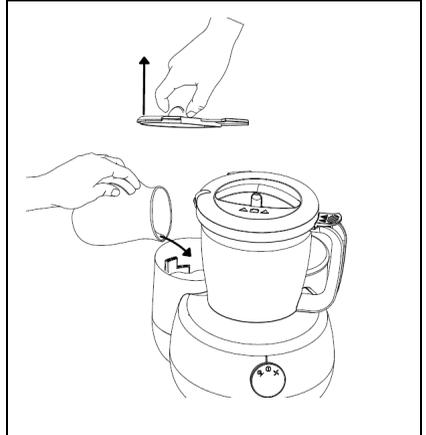

Pic.6

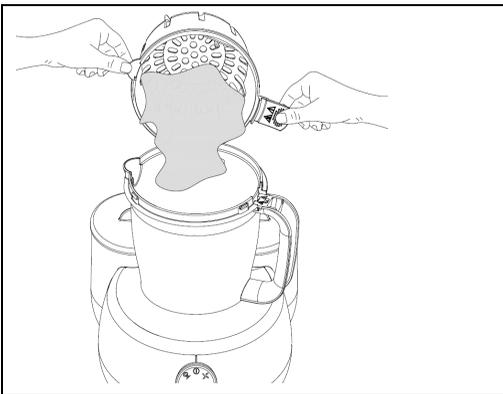

Pic.7

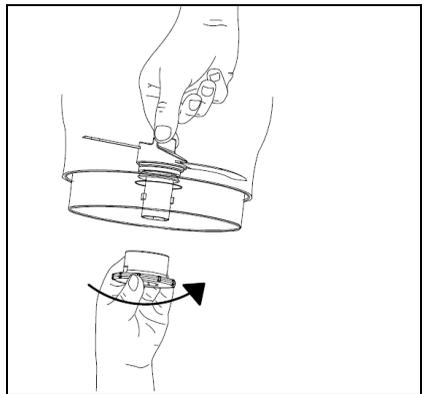

LEGEND

- A. Cap
- B. Food basket
- C. Jar
- D. Blade group
- E. Steam chamber
- F. Water tank
- G. Cable
- H. Knob

INSTRUCTIONS FOR USE

PRELIMINARY OPERATION

- 1.Position the appliance on a flat surface
- 2.Make sure the switch is in the central position (OFF)
- 3.Remove the jar (C) by turning it in anticlockwise from its handle (Pic.2), open the cap (A) by turning it from its handle in anticlockwise (Pic.3) and put the raw food in the basket (Pic.4) (the total weight of all ingredients must be maximum 300g), make sure the blade group (D) is complete and fixed well, close the cap (A) and insert the jar (C) on the product by placing it in position and turning it in clockwise.
- 4.Make sure there is the steam chamber cover (E) than fill the water tank (F) with maximum 250ml (Pic.5), till the level arrives at the third sign.
- 5.Switch on the Cooking function by turning the knob (H) in clockwise
- 6.Warning: the flow of steam will only start a few minutes after the unit is switched on (3 minutes)
7. Warning: When the water contained in the water tank (F) reaches the minimum level, the machine stops heating after a few minutes, the knob (H) remains in position and the light turns off. Switch the unit off and by turning the knob (H) in anticlockwise for one step. Warning: The appliance is equipped with an automatic device which turns off the Cooking function for the production of steam when the water contained in the water tank (F) is finished.
- 8.After the time indicated for the cooking or when the water level reaches the minimum, switch off the Cooking function and open the cap (A) to remove the basket (B) with the cooked food
- 9.Warning: when the user open and remove the cap (A) the steam in the jar (C) and in the steam chamber comes immediately out, pay lot attention during this action and handle with care the food basket (B).
- 10.Throw the cooked ingredients from the basket (B) to the jar (C) maintaining the cooking water (Pic.6) than close the cap (A) without the basket (B)

11. Turn the knob (H) in anticlockwise and start blending the food, every blending operation take 10 seconds. Repeat this process several times until the food reaches the desired consistency, suggested cycle for warm food 5 cycles, suggested cycle for raw food 3 cycle.

12. Warning: wait 10 seconds between one blending and another.

CLEANING AND MAINTENANCE

Warning!!

Before performing the following cleaning/ maintenance operations, always switch off the appliance, unplug the power cable (G) from the socket and allow the unit to completely cool, including the jar (C) and the steam chamber.

DAILY CLEANING

Cleaning the jar and the accessories

The jar (C) and the kitchen accessories (cap and basket) can be washed by hand using a normal washing up liquid (do not use abrasive or descaling product)

It is advisable to remove the blade group (D) before washing the jar (C)

Cleaning the water tank

To clean the tank be sure the product is cold and unplugged then it can be clean with soap and water and rinsed thoroughly. Do not use harsh cleaning agents such as bleach or one contain chlorine or its compounds

If lime scale deposit form, fill the tank with a solution of equal parts of cold tap water and white vinegar, leave for at least 10 hours then rinse thoroughly using cold tap water only.

Cleaning the blade group

To prevent/reduce the risk of oxidation and corrosion of the blades, the blade group must be cleaned and dried after every use. Remove the blade group from the jar and clean it with soap and water, do not use harsh detergents such as bleach.

Warnings: Do not wash the blade group in the dishwasher.

PROBLEMS AND SOLUTIONS

Problem

- a) The heating element does not work
- b) The appliance is very noisy
- c) The blender does not work

Solutions

a)

- 1) Check that the power cord (G) is connected to the socket.
- 2) Check that the switch is in the right position
- 3) Check that there is enough water in the tank
- 4) To reactivate the production of steam after a cycle of use, always first switch off, then wait for the heating element to cool down sufficiently, then switch the appliance back on via the switch
- 5) Check that all the plastic parts are in the right position, especially the cap

(A)

b)

- 1) Check that all the plastic parts are in the right position
- 2) Check that the appliance is clean up well

c)

- 1) Check that the power cord (G) is connected to the socket.
- 2) Check that the switch is in the right position (switched on the right)
- 3) Check that all the plastic parts are in the right position, especially the cap

(A)

TECHNICAL FEATURES

MOD. FP050

Nominal voltage: 220-240V~ 50/60Hz

Absorbed power: Boiler 380-420W

Blender 130W

Blender operating cycles: 10sec ON – 10sec OFF

MAX ingredients weight: 300g

Water tank capacity: 250ml

Jar MAX capacity: 1.1L

Weight: 1.7Kg

Measurements: 212x240x280

Manufacturer : Elettroplastica S.p.A - via del Commercio, 1 – 25039

Travagliato (BS) Italy

CE Conformity:

This Food processor – ELY Mod FP050 complies with all the essential requirements and other provisions indicated in the EU Directives 2004/108/EC (electromagnetic compatibility) and 2006/95/EC (electrical safety). To request a copy of the EC declaration please feel free to 23 contact the Manufacturer Elettroplastica S.p.A - via del Commercio, 1 –25039 Travagliato (BS) Italy

SYMBOLS KEY

	Equipment in compliance with the essential requirements laid down in the EC Directives in force
	Warning!
	Warning! Hot water vapour
	Please read instructions booklet
	Warning! Hot surface
	Users instructions
	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

This product complies to EU directive 2002/96/EC. The crossed bin symbol on the appliance indicates that the product, at the end of its life, must be disposed of separately from domestic waste, either by taking it to a separate waste disposal site for electric and electronic appliances or by returning it to your dealer when you buy another similar appliance. The user is responsible for taking the appliance to a special waste disposal site at the end of its life. If the disused appliance is collected correctly as separate waste, it can be recycled, treated and disposed of ecologically; this avoids a negative impact on both the environment and health, and contributes towards the recycling of the product's materials. For further information regarding the waste disposal services available, contact your local waste disposal agency or the shop where you bought the appliance.